

# REMINGTON®

EST. NEW YORK 1937

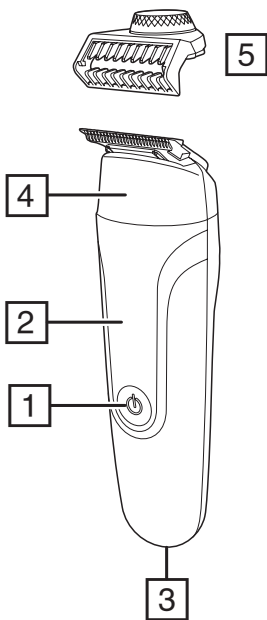 
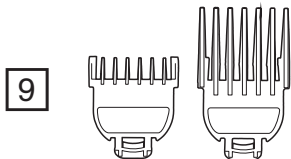 
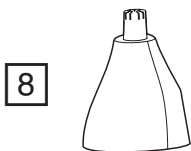 
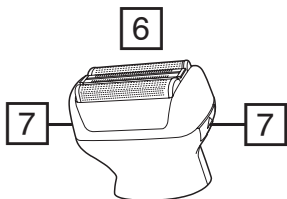 


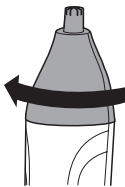 
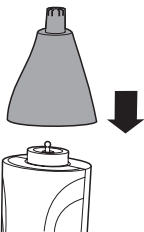 
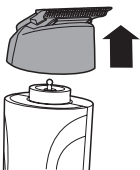 
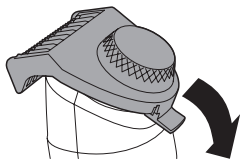 
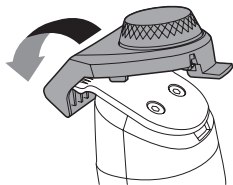 
## Head & Body Multi-Groomer PG760

 [www.remington.co.uk](http://www.remington.co.uk)

Register online for an **EXTRA** year guarantee

Visit [uk.remington-europe.com/product-registration](http://uk.remington-europe.com/product-registration) You must register within 28 days of purchase.



**A****B**

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

---

## IMPORTANT SAFEGUARDS

---

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.



Suitable for use in a bath or shower.

- **WARNING:** Detach the device from the charging adapter before cleaning it in water.
- Do not use the product with a damaged cord.
- The battery in this device is not replaceable.
- The battery is a type Li-ion 750mAH and must only be charged between 0°C and 45°C.
- Do not expose the appliance or battery to excessive temperatures.
- Do not use the appliance if it is damaged or malfunctions.
- Do not use attachments other than those we supply.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.

## PARTS

1. On/off switch
  2. Charging indicator lights
  3. Charger connector
  4. Precision T-blade
  5. Adjustable stubble comb (1.0 - 5 mm)
  6. Foil shaver attachment
  7. Foil release buttons
  8. Nose and ear trimmer
  9. Fixed guide combs (1.5 - 15 mm)
- Not shown:
- USB charging cable
  - Storage case

## CHARGING YOUR APPLIANCE

Before using your trimmer for the first time, charge for 2 hours.

1. Ensure the product is switched off.
2. Connect the product to the USB cable and then connect the USB end of the cable to a powered USB port.

### CHARGING INDICATOR LIGHTS

#### DURING CHARGING

Charge Level	0-33%	33-66%	66-100%	100% (after 4 seconds)
Lights	● ● ⦿	● ⦿ ○	⦿ ○ ○	● ● ●

○ ON ● OFF ⦿ FLASHING

Once fully charged, all three lights will go out after 4 seconds.

#### DURING USE

Charge remaining	100 - 66%	66 - 33%	33 - 10%	10 - 0%
Lights	○ ○ ○	● ○ ○	● ● ○	● ● ⦿

○ ON ● OFF ⦿ FLASHING

The charge level is shown for 4 seconds after you switch your trimmer on.

- Do not recharge your product after each use as this will shorten the life of the battery.

- Note: To preserve the life of your batteries, let them run out every 6 months then fully charge.
- On a full charge, your trimmer will run for up to 60 minutes of cordless usage.
- The trimmer has a 5 minute quick charge feature that will provide enough charge for 1 grooming session.

---

## ATTACHMENTS

---

### TO FIT AND REMOVE ATTACHMENTS (FIG. A)

Ensure that the device is switched off before fitting or removing attachments.

- To remove, rotate the attachment anti-clockwise until it unlocks and then lift it off.
- To fit, place the desired attachment on top of the device and rotate the attachment clockwise to lock it into place.

### FITTING AND REMOVING FIXED GUIDE COMBS

#### To Fit

- Hook the front of the guide comb over the blade.
- Press the back of the guide comb down until it clicks into place.

#### To Remove

- Lift the tab on the back of the guide comb upwards until it comes free from the blade.

### ADJUSTABLE STUBBLE COMB (FIG. B)

- Fit the adjustable stubble guide comb in the same way as you would fit a fixed guide comb.
- The 1.0 - 5 mm comb can be adjusted in 0.5mm increments simply by turning the wheel to the desired setting. Turn the wheel clockwise for longer length and anticlockwise for shorter length.
- The indicator on the wheel will point to the chosen setting.
- Use the trimmer without the adjustable comb for trimming hair close to the skin. This will trim hair to 1.0 mm, holding the blades perpendicular to the skin will trim hair to 0.5 mm.

---

## INSTRUCTIONS FOR USE

---

- Comb facial hair with a fine comb before you start trimming.
- Comb your hair in the direction that it grows so that the hairs are at their maximum height and facing in the same direction.
- After trimming, lightly go over the trimmed areas with the foil to get a smooth clean finish.

- Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e. upwards, downwards or across) for better results.
- Hair should be dry and free from any waxes or lotions.
- If hair builds up during use, switch the unit off, remove any attachment in use and clean any excess hair clippings from the attachment and groomer.

### **TO THIN AND TAPER THE BEARD/MOUSTACHE**

- Attach the adjustable stubble comb or a fixed guide comb to the T-blade. If you are trimming for the first time start with the maximum trimming length setting.
- Turn the unit on.
- Start trimming under the chin following the line of the jaw.
- Place the flat top of the trimmer comb against the skin.
- Slowly slide through the hair. Work upwards towards the ear and upper beard line. Repeat from different directions as necessary.
- Tidy the beard edges using the T-blade. Use slow controlled movements to create contoured lines.
- If hair builds up in the trimmer comb during the trimmer process, switch the unit off, pull the comb and brush the hair off.

### **FINE DETAILING AND EDGING**

1. Hold the device with the cutting blade (teeth) facing you and at 90 degrees to the skin.
2. Start with the blade resting lightly against your skin, use motions towards edge of beard line to trim to desired locations in facial area.
3. Shape as desired.

### **CONTOUR EDGING AND CLOSE HAIR CUTTING**

#### ***Contour edging:***

1. Hold the device with the cutting blade (teeth) facing you and at 90 degrees to the skin.
2. Start with the edge of the beard/moustache line and, with the blade resting lightly against the skin, use slow controlled movements to create contoured lines.

#### ***Close hair cutting:***

1. Use the fingers of one hand to lift the hair at the base of your head up off your neck.
2. Your index finger should be covering the roots of the hairs you are lifting to prevent them from being accidentally cut.
3. Hold the trimmer to the base of your neck with the blade facing up. Move the trimmer up the neck until it touches your index finger which is protecting the hair roots.

4. Move your trimmer slowly and keep the hair roots at the base of your head out of the way of the trimmer.

## **HAIR CLIPPING**

### ***Step 1: Nape of the neck***

- Attach the 3mm or 6mm fixed comb.
- Hold the trimmer with the blade teeth pointing upwards. Start at the centre of the head at the base of the neck.
- Slowly lift the trimmer, working upwards and outwards through the hair trimming just a little at a time.

### ***Step 2: Back of the head***

- With the 12mm or 15mm guide comb attached, cut the hair at the back of the head.

### ***Step 3: Side of the head***

- With the 3mm or 6mm guide comb attached, trim sideburns. Then change to the longer 9mm guide comb and continue to cut the top of the head.

### ***Step 4: Top of the head***

- Use the longer length fixed combs to cut hair on top of the head against the direction in which the hair normally grows.
- Always work from the back of the head.

### ***Step 5: The finishing touches***

- Use the trimmer without a comb for close trimming around the base and sides of the neck.
- To produce a clean straight line at the sideburns, place the trimmer at right angles to the head, tips of the blades lightly touching the skin and then work downwards.

## **USING THE FOIL SHAVER**

- Fit the foil shaver attachment.
- Use short, well-controlled linear movements. Use your free hand to stretch your skin. This encourages the hair to stand upright, making it easier to shave.
- Note: always trim your facial hair before shaving.

---

## **CLEANING AND MAINTENANCE**

---

Care for your appliance to ensure a long lasting performance. We recommend that you clean it after each use.

### **AFTER EACH USE**

- Brush any accumulated hairs from the trimmer and attachment heads.
- The easiest and most hygienic way to clean the trimmer is under the tap.



- Place one or two drops of oil on the blades. Turn the appliance on to distribute the oil evenly, wipe off any excess oil.

### **REPLACING THE FOILS AND CUTTERS**

To ensure continued high quality performance from your shaver, we recommend the foils and cutters are replaced regularly.

#### **Signs that your foils and cutters need replacing**

- Irritation: as foils get worn, you may experience skin irritation.
- Pulling: as the cutters wear, your shave may not feel as close and you may feel the cutter pulling your hair.
- Wear through: you may notice that the cutters have worn through the foils.

#### **TO REPLACE THE FOIL/CUTTERS**

- Remove the shaver head (pull the head up and off).
- Fit the new head assembly over the hair pocket and press down to click into place.

---

### **BATTERY REMOVAL**

---

This appliance contains batteries that are non-replaceable. When the battery is at the end of its life, the appliance and battery must be properly disposed of at an official recycling point.

We strongly recommend that a professional removes the rechargeable battery. Parts of the shaver case, and tools have sharp edges and may cause injury if not handled correctly.

- Be aware of the risk of terminals of the battery being short-circuited by metal objects.
  - The rechargeable battery must be removed from the appliance before it is scrapped.
  - Disconnect the charging adapter before removing the battery.
1. Ensure the device is discharged of all power. To do this, switch it on and allow it to run until it stops.
  2. Remove any attachment.
  3. Using a small screwdriver, carefully pry the two screw covers away from the bottom housing.
  4. Unscrew the two screws located on the bottom.
  5. Starting at the top seam, carefully use a small flat screwdriver and, following the seam, pry the top panel apart.
  6. Unscrew the two screws located on front.
  7. Using a small flat screwdriver, pry the bottom housing from the body.
  8. Unscrew the two screws and remove front housing.
  9. Gently pry open the latches of inner housing then remove the circuit board.
  10. Disconnect the battery from the circuit board.
- Do not attempt to operate the shaver once you have opened it.

---

## RECYCLING

---



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

---

## SERVICE AND GUARANTEE

---



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under

any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts\* are excluded and are only covered by a 1 year warranty.

\*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

---

## SERVICE CENTRE

---


### UNITED KINGDOM

 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd  
Fir Street, Failsworth, Manchester  
M35 0HS, UK

[www.remington.co.uk](http://www.remington.co.uk)  
[productsupport@Remington.co.uk](mailto:productsupport@Remington.co.uk)

### IRELAND

 142 951 40

Remington Consumer Products,  
Unit B12, Ballymount Corporate Park,  
Ballymount, Dublin 12

<https://ie.remington-europe.com>  
[productsupport@Remington.co.uk](mailto:productsupport@Remington.co.uk)

# **Ref. No. PG760**

## **Type No. RG036A**

23/UK/ PG760 T22-7002112 Version 05 /23

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[www.remington.co.uk](http://www.remington.co.uk)

© 2023 Spectrum Brands, Inc.