

REMINGTON®

EST. NEW YORK 1937

 


 
 
 
 
X9 Limitless Rotary Shaver XR1790

 remington-europe.com

Register online for an EXTRA year guarantee


Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

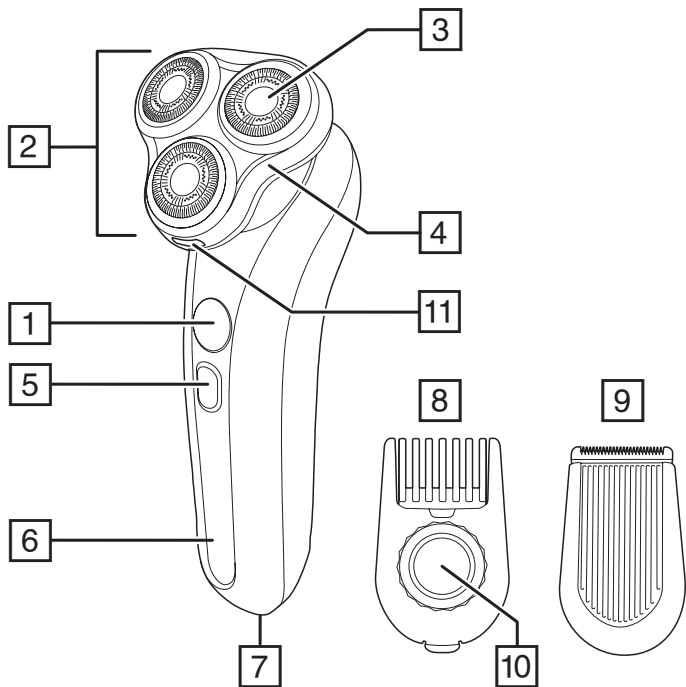

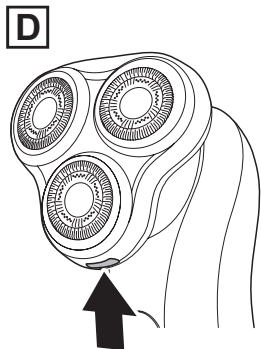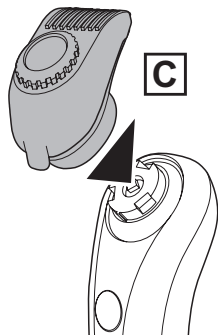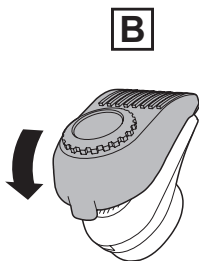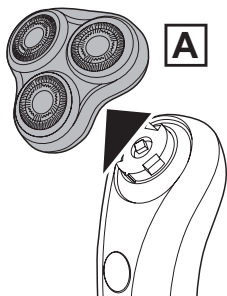

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury.
-  Suitable for use in a bath or shower.
- Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- The battery in this device is not replaceable.
- Do not use the appliance if it is damaged or malfunctions.
- Do not use attachments other than those we supply.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.

PARTS

- | | |
|--------------------------------------|--------------------------|
| 1. On/off switch | 9. Detail trimmer |
| 2. Pivoting head and cutter assembly | 10. Comb adjustment dial |
| 3. Individual flexing heads | 11. Head release button |
| 4. Hairpocket | <i>Not shown</i> |
| 5. Turbo button | • USB charging cable |
| 6. Shave - Learn LEDs | • Cleaning brush |
| 7. Power connector | • Head guard |
| 8. Adjustable stubble comb (1-5mm) | • Travel case |
-

GETTING STARTED

CHARGING

- It is recommended to fully charge your appliance before using it for the first time.
- Ensure the product is switched off.
- Connect the product to the USB cable and then to the USB end of the cable to a powered USB port.

SHAVE-LEARN LEDs

Number of shaves remaining

During use, your shaver continuously analyses the average time it takes you to shave. The LEDs are all lit when the battery has enough charge for 5 shaves or more. When it senses that there are only 5 shaves remaining before the battery needs to be recharged, the LEDs will show each remaining shave left when you turn on your shaver. All 5 LEDs means you have 5 or more shaves left, 4 LEDs, 4 shaves, etc. The LEDs will fade out after 5 seconds.

Charging

During charging, the 5 LEDs act as a fuel gauge with each LED representing 20% of the battery charged. When your shaver is fully charged, all of the LEDs will switch off.

- Run time from fully charged is up to 60 mins.
- Charge time from empty is 90 minutes.
- Do not recharge your product after each use as this will shorten the life of the battery.
- Note: To preserve the life of your batteries, let them run out every 6 months then fully charge.

QUICK CHARGE FEATURE

- Your shaver has a 5 minute quick charge feature that will provide enough charge for 1 shave (3 minutes).

INSTRUCTIONS FOR USE

SHAVING

1. Switch the shaver on by pressing the on/off button.
2. Stretch the skin with your free hand so the hairs stand upright.
3. Only apply light pressure on the shaving head while shaving (pressing too hard can cause skin irritation).
4. Use short, circular strokes.

SHAVING WITH SHAVING GEL

- Follow the same instructions as dry shaving if using shaving gel.
- **CAUTION** After use with shaving gel, please rinse the head and cutters under warm water to clean away any excess gel and debris.

TURBO FEATURE



Use the Turbo feature to shave thick stubble. Press the turbo button to operate the shaver in Turbo mode. The turbo button will light up white. Press the turbo button again to deactivate turbo mode.

DETAIL TRIMMER AND COMB ATTACHMENT

To fit the detail trimmer and comb attachment:

1. Switch off your shaver.
2. Grasp the head and cutter assembly and pull it away from the body of your shaver (Fig A).
3. If using, clip the adjustable comb over the trimming attachment (Fig. B)
4. Clip the detail trimmer onto the body of your shaver (Fig. C).

TRAVEL LOCK

The travel lock feature prevents the shaver from turning on and discharging accidentally while stored away or travelling. To lock, press and hold the turbo button for 3 seconds until the  icon comes on. To unlock, press and hold the turbo button for 3 seconds until the  icon switches off.

TIPS FOR BEST RESULTS

- Always hold the shaver at right angles to the skin so that all three heads are touching the skin with equal pressure.
- Use moderate to slow stroking movements. The use of short circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- **DO NOT** press hard against the skin in order to avoid skin irritation.

CARE FOR YOUR SHAVER

Care for your shaver to ensure a long lasting performance. We recommend you clean your shaver after each use.

- Ensure your shaver is switched off before cleaning.
- 1. Open the shaver head by pressing the release button (Fig. C).
- 2. The head assembly will open (Fig. D).
- 3. Rinse under a tap to wash away hair trimmings.
- 4. Carefully brush away any hairs from the cutters.
- 5. Snap the head assembly closed.

Note: The individual cutters are designed to be permanently retained in the shave head and flushed out with water. Do not remove the individual cutters for cleaning.

DETAIL TRIMMER

Lubricate the teeth of the detail trimmer every six months with a drop of sewing machine oil.

REMOVING THE RECHARGEABLE BATTERY

We strongly recommend that a professional removes the rechargeable battery. Parts of the shaver case, and tools have sharp edges and may cause injury if not handled correctly.

- The rechargeable battery must be removed from the appliance before it is scrapped.
- Disconnect the charging adapter before removing the battery.
- 1. Remove the shaver head (pull the head up and off).
- 2. Using a small screwdriver, pry the front panel off the handle.
- 3. Unscrew the 3 screws located on front of shaver.
- 4. Using a small flat screwdriver, pry the front housing from the body.
- 5. Unscrew the 6 screws to open the inner housing.
- 6. Take out the circuit board.
- 7. Disconnect the battery from the circuit board.
- Used batteries must be removed from the appliance and disposed of at an appropriate official recycling/collection point.
- Do not attempt to operate the shaver once you have opened it.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.


Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

UNITED KINGDOM

 0800 212 438 (free call mainland UK)


Spectrum Brands (UK) Ltd
Fir Street, Failsworth, Manchester
M35 0HS, UK

www.remington.co.uk

Product support:

productsupport@remington.co.uk

IRELAND

 142 951 40

Remington Consumer Products,
Unit B12, Ballymount Corporate Park,
Ballymount, Dublin 12

<https://ie.remington-europe.com>

Product support:

productsupport@remington.co.uk

Ref. No. XR1790

Type No. R35A

22/UK/ XR1790 T22-7002560 Version 03 /22

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

remington-europe.com

© 2022 Spectrum Brands, Inc.