

# REMINGTON®

## DuraBlade



MB050

Register online for  
£10,000 prize draw  
EXTRA year guarantee  
FREE rewards gallery



Visit [www.remington.co.uk/product/register](http://www.remington.co.uk/product/register)  
You must register within 28 days  
of purchase.



Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe.

Remove all packaging before use.

---

## IMPORTANT SAFEGUARDS

---

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Suitable for use in a bath or shower. 
- 3 This appliance should never be left unattended when plugged into a power outlet, except when charging.
- 4 Do not use attachments other than those we supply.
- 5 Do not twist or kink the cable, or wrap it round the appliance.
- 6 Do not use the appliance if it is damaged or malfunctions.
- 7 If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- 8 Do not plug or unplug the appliance with wet hands.
- 9  This appliance should be supplied with approved safety isolating adaptors PA-0510E (for Europe), PA-0510U (for United Kingdom) with the output capacity of 5.0 Vdc; 1A (adaptor output).



---

## KEY FEATURES

---


- 1 On/Off switch
- 2 Blade
- 3 Combs (1, 2, 4, 6mm) (not shown)
- 4 LED charging indicator
- 5 USB charging cable

---

## GETTING STARTED

---

### CHARGING YOUR APPLIANCE

-  Note: It is recommended to fully charge your appliance before using for the first time. Please refer to the charge times shown in this book.
- Ensure the product is switched off.
- Connect the product to the USB cable and then connect the USB end of the cable to a powered USB port.

## ✱ CHARGE LEVEL INDICATORS

Charge Level	Indicator
Charging	LED shows solid
Low charge	LED flashes rapidly
Full charge	LED will turn off

- Run time from fully charged is up to 60 minutes.
- Charge time from empty is 4 hours.
- ✱ Note: To preserve the life of your batteries, let them run out every 6 months then fully charge.

---

## ⚠ INSTRUCTIONS FOR USE

---

- Switch the product on by pressing the On/Off switch.
- Always comb your beard or moustache with a fine comb before you start trimming.

### ✱ ATTACHING AND REMOVING THE COMBS

- Select the desired trimming length comb. Place the comb over the top of the blade and gently push this down onto the blade until it clicks into place.
- To remove the comb, grasp the comb and pull firmly upwards and away from the groomer.

### ✱ TO TRIM THE BEARD

- Select your desired trimming length comb. If you are trimming for the first time start with the maximum trimming length setting.
- Turn the unit on.
- Place the flat top of the fixed comb against the skin.
- Slowly slide through the hair. Repeat from different directions as necessary.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull off the comb and brush the hair off.

### ✱ TO GET A SHAVEN LOOK

- To trim any length of beard or stubble hair for a clean, shaven look then follow the above steps without a comb attached to the blade head.
- Place the flat top of the blade against the skin and slowly slide through the hair against the direction of growth.

### ✦ TRIMMING AND EDGING

- Hold the groomer with the back side of the blade facing you with no combs attached.
- Start with the blades resting lightly against your skin, use motions towards edge of beard line to trim to desired locations in facial area.
- Shape as desired.

### ✦ TRIMMING WITH SHAVING GEL

- Follow the same instructions as dry shaving if using shaving gel.
- ✦ **Caution:** After use with shaving gel, please rinse the blade under warm water to clean away any excess gel and debris.
- To keep the unit in optimal condition we recommend re-oiling the blades after cleaning. Place a few drops of cutter or sewing machine oil onto the blades. Wipe off excess oil.

---

### CARE FOR YOUR GROOMER

---

- To ensure long lasting performance of the groomer, clean after each use.
- The easiest and most hygienic way to clean the groomer is by rinsing the head under the tap after use while the blades are running.

---

### BATTERY REMOVAL

---

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- Ensure the trimmer is discharged of all power.
- Remove the comb attachment.
- Detach the blade head.
- Pry off the bottom gap below the grips.
- Press in exposed tabs and pull internal frame out.
- Disconnect the battery from the circuit board and internal frame.
- The battery is to be disposed of safely.

---

### ENVIRONMENTAL PROTECTION

---

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



---

## ➔ SERVICE AND GUARANTEE

---

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at [www.remington.co.uk/parts-accessories](http://www.remington.co.uk/parts-accessories)


---

## ➔ SERVICE CENTRE

---

### United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

[www.remington.co.uk](http://www.remington.co.uk)

### Ireland

 Tel 142 951 40

Remington Consumer Products,  
Unit B12, Ballymount Corporate Park,  
Ballymount, Dublin 12.  
[www.ie.remington-europe.com](http://www.ie.remington-europe.com)

---

## REGISTER ONLINE FOR

---

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit [www.remington.co.uk/productregister](http://www.remington.co.uk/productregister). You must register within 28 days of purchase.



## **Model No. MB050**

17/UK/ MB050 T22-0004812 Version 02 /17

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[www.remington.co.uk](http://www.remington.co.uk)

© 2017 Spectrum Brands, Inc.